

ROTOR WING PMA PARTS LIST

OEM	MODEL APPLICABILITY	OEM P/N	ABLE P/N	DESCRIPTION
AIRBUS HELI	AS-350	704A39812004	77044-1	MAG SEAL, TR GEARBOX
BELL	206A/B ,206L, OH, TH	047-641-175-001	047-641-175-001AA	RACE - TR
BELL	OH-58D, 407	99380	099380AA	WEAR SLEEVE
BELL	407	140-007-28T24E6	140-007-28T24E6AA	WASHER
BELL	407	20-065-07074CA	20-065-07074CAAA	BOLT
BELL	204B, 205A-1, 212	212-311-008-101	2AA-311-008-101	BEARING - BELL MEDIUM YOKE
BELL	206 SERIES	206-062-101-101	206-062-101-101AA	FWD ENGINE LEG ASSY
BELL	206 SERIES	206-062-101-102	206-062-101-102AA	FWD ENGINE LEG ASSY
BELL	206 SERIES	206-010-111-105	2AA-010-111-105	ADJUSTING SCREW
BELL	214ST, 206L-4, 407	204-010-428-001	2AA-010-428-001	SEAL
BELL	206 SERIES	206-010-795-101	2AA-010-795-101	PITCH LINK ASSY
BELL	206B, L3, L4	206-010-795-105	2AA-010-795-105	PITCH LINK ASSY
BELL	206 SERIES	206-011-119-101	2AA-011-119-101	NUT
BELL	204B, 204A ,212, CH, UH	204-011-131-107	2AA-011-131-107	SEAL
BELL	206 SERIES	206-011-102-123	2AA-011-102-123	PAD
BELL	206 SERIES	206-011-111-001	2AA-011-111-001	BEARING
BELL	212, 412, 412EP	212-040-176-101	2AA-040-176-101	OIL BOOT
BELL	206 SERIES	206-011-102-119	2AA-011-102-119	PILLOW BLOCK ASSY
BELL	206 SERIES	206-011-118-001	2AA-011-118-001	YOKE BEARING
BELL	206 SERIES	206-011-119-005	2AA-011-119-005	NUT
BELL	206A, 206B	206-010-245-101	2AA-010-245-101	SLEEVE
BELL	206A, B, B-1	206-011-125-105	2AA-011-125-105	PIN ASSY
BELL	204B, 205A-1, 212, 412, UH	204-011-430-001	204-011-430-001	SWASHPLATE BEARING
BELL	206 SERIES	206-011-134-001	2AA-011-134-001	BUFFER PAD
BELL	206B, 206L, 206L1, 206L3, 206L4	206-011-130-003	2AA-011-130-003	RETAINER ASSEMBLY
BELL	206A, B, L, L1, L3, L4, OH-58 TH-57A, 57B, 57C, 57D, TH-67	206-011-156-101	2AA-011-156-101	WEAR DISK
BELL	206A/B	206-031-509-103	2AA-031-509-103	DRAG PIN ASSY
BELL	206-A, -B, -B3, -L, -L1, -L3	206-011-129-003	2AA-011-129-003	RETAINER
BELL	407, 427	20-065H06010CA	20-065H06010CAAA	BOLT (SHEAR BEARING)
BELL	206A/B	206-011-260-103	2AA-011-260-103	LATCH BOLT
BELL	206 SERIES	206-011-115-001	2AA-011-115-001	CLOSURE
BELL	204B, 205A, 212	204-011-132-001	2AA-011-132-001	SEAL
BELL	206B, L , L-1, L-3, L-4 BIG HUB	S30769	S30769AA	EXCLUDER
BELL	206L-4, 407	206-011-732-103	2AA-011-732-103	SLEEVE TR
BELL	206A/B	206-031-513-101	2AA-031-513-101	BUSHING
BELL	206L, L-1, L-3, L-4	206-033-517-007	2AA-033-517-007	JOURNAL BEARING
BELL	206 SERIES	206-011-260-101	2AA-011-260-101	LATCH BOLT
BELL	206A, B, B-1, L, L-1, L-3, L-4	206-040-032-105	2AA-040-032-105	TRANSMISSION DUPLEX BEARING
BELL	204, 205A-1, 212, 412, 205A/B 206L, 407	204-040-132-001	2AA-040-132-001	RACE
BELL	407	407-040-416-103	4AA-040-416-103	TR OUTPUT SHAFT
BELL	206 SERIES	206-040-205-105	2AA-040-205-105	BEARING
BELL	407	406-310-402-103	4AA-310-402-103	SWASHPLATE DUPLEX BEARING
BELL	206 SERIES	206-040-320-103	2AA-040-320-103	OIL COOLER BLOWER SHAFT
BELL	206 SERIES	206-040-439-001	2AA-040-439-001	T/R OUTPUT SHAFT
BELL	206 SERIES	206-011-128-103	2AA-011-128-103	BLUE COAT BUSHING
BELL	407, OH-58D	214-040-814-105	2AA-040-814-105	OIL SEAL WEAR SLEEVE
BELL	206	206-076-132-001	2AA-076-132-001	SLEEVE
BELL	206B, L , L-1, L-3, L-4	206-310-004-103	2AA-310-004-103	STRAP ASSY, 48 MONTH-BIG HEAD
BELL	206 SERIES, 407	206-310-700-101	2AA-310-700-101	TR SEAL
BELL	206	206-011-132-113A	2AA-011-132-113A	MAIN ROTOR GRIP
BELL	206L, L1, L3	35-79501-1093-2	ABLE-0182-1093-2	SHAFT
BELL	206 SERIES	206-340-104-101	2AA-340-104-101	SEAL
BELL	412	536841	536841AA	SLEEVE
BELL	206 SERIES	206-340-206-101	2AA-340-206-101	SEAL
BELL	204B, 205A-1, 212, 412, 206A/B	204-040-725-003	2AA-040-725-003	ROLLER BEARING SET
BELL	206A, B, B-1, L, L-1, L-3, L-4	206-340-301-101	2AA-340-301-101	ROTOR BRAKE DISC
BELL	412, 427	206-340-401-101	2AA-340-401-101	SLEEVE
BELL	407	407-010-206-103	4AA-010-206-103	SPRING ASSY
BELL	412, CH-146	412-010-106-101	4AA-010-106-101	PIVOT BEARING

OEM	MODEL APPLICABILITY	OEM P/N	ABLE P/N	DESCRIPTION
BELL	412	412-340-102-101	4RP-340-102-101	BOOT
BELL	407, 427	406-010-121-101	4AA-010-121-101	PLUG
BELL	407, 427	406-010-123-101	4AA-010-123-101	LOCK, DROP STOP
BELL	407, 427	406-010-123-103	4AA-010-123-103	LOCK, DROP STOP
BELL	206A, B, B-1, L, L-1, L-3, L-4	206-011-125-001	2AA-011-125-001	PIN ASSY
BELL	407	406-010-421-103	4AA-010-421-103	SPACER
BELL	407	406-010-429-101	4AA-010-429-101	SWASHPLATE DRIVE PIN
BELL	407, OH-58D	406-010-457-105	4AA-010-457-105	BUSHING
BELL	407, 427	406-010-458-101	4AA-010-458-101	SPACER
BELL	407	407-040-320-103	4AA-040-320-103	TR FAN SHAFT/OIL COOLER BLOWER
BELL	206 SERIES	206-011-150-105	2AA-011-150-105	FITTING ASSY
BELL	407	407-310-203-101	4AA-310-203-101	CORNER MOUNT
BELL	206A-B	206-310-004-101	2AA-310-004-101	STRAP ASSY, 48 MONTH-SMALL HEAD
BELL	407	406-310-406-103	4AA-310-406-103	BUSHING
BELL	407	406-310-407-101	4AA-310-407-101	SEAL
BELL	407	406-310-410-101	4AA-310-410-101	SLIDER BEARING
BELL	206L-4, 407	407-312-100-101	4AA-312-100-101	TR FLAPPING BEARING
BELL	412, CH-146	412-340-100-101	4AA-340-100-101	SEAL
BELL	407	407-340-003-101	4AA-340-003-101	INPUT SEAL
BELL	407	407-340-004-101	4AA-340-004-101	WEAR SLEEVE
BELL	407	407-340-005-101	4AA-340-005-101	SEAL
BELL	CH-146, UH-1, UH-1N, UH-1Y 206B, L, L1, L3, L4	80631	080631AA	WEAR SLEEVE
BELL	206A, 206L, 214ST, 407, OH-58 TH-57A, 57B, 57C, 57D, TH-67	209-340-265-103	2AA-340-265-103	SEAL
BELL	206L-4, 407	407-340-102-101	4AA-340-102-101	SEAL
BELL	206-A, -B, -L, L-1, -L3	406-340-104-101	4AA-340-104-101	SEAL
BELL	206 SERIES, 407	406-340-105-101	4AA-340-105-101	SEAL
BELL	205A-1, 212, 412, 412EP, 427	406-340-105-103	4AA-340-105-103	SEAL
BELL	407	407-340-106-101	4AA-340-106-101	WEAR SLEEVE
BELL	407	407-340-107-101	4AA-340-107-101	INPUT SHAFT
BELL	407	407-340-108-101	4AA-340-108-101	ADAPTER
BELL	407	407-340-109-101	4AA-340-109-101	RETAINING RING
BELL	206 SERIES	206-040-272-101	2AA-040-272-101	SEAL ASSY
BELL	407, 427	427-342-412-101	4AA-342-412-101	INPUT SEAL
BELL	407, 427	427-342-415-101	4AA-342-415-101	SLEEVE
BELL	206 SERIES	529052	529052AA	SEAL
BELL	206 SERIES, 407	535639-10	535639AA-10	SEAL - TR
BELL	206 SERIES	206-340-204-101	2AA-340-204-101	SEAL
BELL	206B-L4	206-040-156-001	76022-1	MAIN DRIVE TRANS, QUILL
BELL	206B-L3	206-040-156-101	81015-1	MAIN DRIVE TRANS, QUILL
BELL	212/412	412-040-111-105	81109-2	TRANS, INPUT QUILL
BELL	206 SERIES	206-011-102-121	2AA-011-102-121	PAD
BELL	206 SERIES	EB9025-14	AA9025-14	NUT
BELL	206-A, -B, -L, L-1, -L3	206-040-048-101	ABLE-0033-101	INPUT PINION ADAPTER
BELL	204B, 205A-1, 212	212-340-113-101	2AA-340-113-101	SEAL
BELL	407	407-340-318-101	4AA-340-318-101	ROTOR BRAKE DISC
BELL	206L-4, 407 SERIES	35-79501-1145-2	ABLE-0182-1145-2	SHAFT
BELL	206A, A-1, B, B-1	35-79501-2005-3	ABLE-0182-2005-3	SHAFT
BELL	206 SERIES	206-011-111-003	2AA-011-111-003	RACE
BELL	204B, 205A-1, 214B	214-040-867-101	ABLE-2747-101	SLEEVE
BELL	206 SERIES, 407	206-010-408-001	ABLE-2844-001	PIVOT PIN- SWASHPLATE
BELL	206 SERIES	206-040-420-101	ABLE-2848-101	SPACER
BELL	407	407-340-032-101	4AA-340-032-101	DUPLEX BEARING
BELL	407	406-010-108-131	4AA-010-108-131	MAIN ROTOR GRIP
BELL	204B, 205A-1, 212	212-311-007-101	2AA-311-007-101	BEARING - BELL MEDIUM YOKE
BELL	204B, 205A, 212, UH	204-010-441-003	2AA-010-441-003	RACE
BELL	407	407-010-105-103	4AA-010-105-103	STUD FOR DROOP STOP
BELL	206 SERIES	206-011-727-001	2AA-011-727-001	BUSHING- TR
BELL	206 SERIES, 407	206-011-727-003	2AA-011-727-003	BUSHING- TR
BELL	206A, B, L, L-1, L-3, L-4, 407, 427	38-79004-1045-2	38-79004-1045-2AA	SEAL
BELL	206A, 206B, 222, 230	206-040-031-001	2AA-040-031-001	BEARING
BELL	205A, 205B, 212, 412, 214B, 214ST	9440791-1	9440791-1AA	DISC
BELL	206B, L, L-1, L-3, L-4	206-040-062-003	2AA-040-062-003	PLATE
BELL	206L, L1, L3	206-040-537-001	2AA-040-537-001	LINER
BELL	206 SERIES	206-011-732-001	2AA-011-732-001	SLEEVE, PC TUBE TR
BELL	206L-4, 407, 427	406-312-103-101	4AA-312-103-101	TR PITCH LINK ASSY

OEM	MODEL APPLICABILITY	OEM P/N	ABLE P/N	DESCRIPTION
BELL	206-A, -B, -B3, -L, -L1, -L3	206-040-203-003	ABLE-0104-003	ADAPTER
BELL	206A/B	206-040-061-001	ABLE-0734-001	LINER
BELL	206L4	20546	20546AA	SHAFT
BELL	212	212-010-121-101	2AA-010-121-101	BUFFER PAD
BELL	206 SERIES	206-011-124-005S	2AA-011-124-005	PLATE
BELL	412	412-010-118-101	4AA-010-118-101	PIN
BELL	407	407-010-120-101	4AA-010-120-101	PIN
BELL	407	406-010-422-107	4AA-010-422-107	ROTATIONAL CONTROLS BUSHING
BELL	407	406-012-104-103	4AA-012-104-103	PLATE, DRIVER CONTROL
BELL	206A, 206B, 206B3, 206L, 206L1, 206L3	9440904	9440904AA	DISC
LEONARDO	139	3G6430A01851	3G6430A01851AA	LOCK WASHER
LEONARDO	PT6C-67C, AW139	3057362-01	3057362-01AA	SEAL
LEONARDO	129139	3G6230A01852	3G6230A01852AA	BUSHING
LEONARDO	109139	3G6230A03752	3G6230A03752AA	SLEEVE
LEONARDO	139	AW005BR095-C	AW005BR095-CAA	TORQUE TUBE ASSY BUSHING
NDI	206L & 407	D0134-6	D0134-6	HOUSING
NDI	407 & 427	D0296-1	D0296-1	BRACKET ASSY
NDI	407	D0189-2	D0189-2	STANDPIPE
NDI	407 & 427	D0307-1	D0307-1	PIN
NDI	407 & 427	D0312-1	D0312-1	HOUSING ASSY
NDI	206L	D0134-5	D0134-5	HOUSING
NDI	407 & 427	D0303-1	D0303-1	FRICTION PAD
NDI	407	407-340-302-103	B0223-4	CALPIER ASSY 407
NDI	407	D0168-2	D0168-2	WASHER
NDI	206L	B0223-KA	B0223-KA	OVERHAUL KIT, ROTOR BRAKE (206L) FOR TWO CALIPER ASSYS
NDI	407	B0223-KB	B0223-KB	OVERHAUL KIT, ROTOR BRAKE (407) FOR ONE CALIPER ASSY
NDI	429	B0238-K	B0238-K	OVERHAUL KIT
NDI	407 & 427	B0244-K	B0244-K	OVERHAUL KIT
NDI	407 & 427	D0301-1	D0301-1	PISTON ASSY
NDI	407	D0134-9	D0134-9	HOUSING ASSY
NDI	206L & 407	D0135-1	D0135-1	PISTON
NDI	407	D0137-1	D0137-1	PLUG
NDI	206L & 407	D0141-1	D0141-1	ROD
NDI	206L & 407	D0142-1	D0142-1	SPRING
NDI	206L & 407	D0151-1	D0151-1	VALVE
NDI	206L & 407	D0151-2	D0151-2	VALVE
NDI	407 & 427	D0159-1	D0159-1	TUBE TRANSFER
NDI	206L	D0166-1	D0166-1	BOLT
NDI	206L	D0168-1	D0168-1	WASHER
NDI	407	D0290-2	D0290-2	FRICTION PAD
NDI	407	D0292-1	D0292-1	BOLT
NDI	407 & 427	D0311-1	D0311-1	HOUSING ASSY
NDI	206L	D0314-1	D0314-1	FRICTION PAD
NDI	407	407-340-318-101	D0162-1	407 DISC
NDI	407 & 427	TFO05-012	TFO05-012	SCRAPER ASSY
NDI	407	427-340-352-113	B0244-1	CALIPER ASSY
NDI	407	B0223-MOD-4	B0223-MOD-4	CALIPER MOD KIT
NDI	206L & 407	D0136-2	D0136-2	SEAT
NDI	407	D0136-3	D0136-3	FWD SEAT 407
NDI	407	D0294-1	D0294-1	BRACKET ASSY
NDI	429	D0413-1	D0413-1	SWITCH
NDI	206A, B, B-1, L, L-1, L-3, L-4	206-340-301-101	D0143-1	L4 DISC
NDI	429	427-340-352-111	B0238-1	CALIPER ASSY
NDI	429	427-340-352-112	B0238-2	CALIPER ASSY
NDI	206L	D0139-1	D0139-1	TUBE TRANSFER
SIKORSKY	S-76B, S-76C	76107-08006-154	761AA-08006-154	PIN
SIKORSKY	S-76A, S-76B, S-76C	76107-08002-113	ABLE-2819-113	BUSHING
SIKORSKY	S-76B, S-76C	76107-08006-153	761AA-08006-153	PIN
SIKORSKY	S-76A, S-76B, S-76C	76107-08007-103	ABLE-2820-103	WASHER
SIKORSKY	S-76A	76351-09023-101	76351-09023-101AA	LINER
SIKORSKY	S-76A, S-76B, S-76C	SB8002-103	SB8002-103AA	SEAL
WOODWARD	206L, 206L-1, 206L-3, 206L-4, 407	67561	67561AA	DRIVE SHAFT
WOODWARD	205A-1, 212, 412	41005826	41005826AA	BOLT

OEM	MODEL APPLICABILITY	OEM P/N	ABLE P/N	DESCRIPTION
WOODWARD	205A-1, 212, 412	41004577	41004577AA	CYLINDER
WOODWARD	205A-1, 212, 412	41003203	41003203AA	UPPER HOUSING
WOODWARD	407, 427	41009491-101	41009491-101AA	ACTUATOR HOUSING
WOODWARD	206A, 206B	41006472	41006472AA	CYLINDER
WOODWARD	205A-1, 212, 412	41004687	41004687AA	CYLINDER
WOODWARD	206A, 206B	41000898	41000898AA	CYLINDER
WOODWARD	205A-1, 212, 412	41004683	41004683AA	LOWER CYLINDER
WOODWARD	206L, 206L-1, 206L-3, 206L-4, 407, 42	41015396	41015396AA	TAB WASHER
WOODWARD	407, 427	407-340-107-101	4AA-340-107-101	SHAFT
WOODWARD	206L, 206L-1, 206L-3, 206L-4, 407, 427	407-340-108-101	4AA-340-108-101	ADAPTER
WOODWARD	206L, 206L-1, 206L-3, 206L-4, 407, 427	41015397	41015397AA	SLOTTED LOCK NUT
WOODWARD	407, 427	41009491-103	41009491-103AA	ACTUATOR HOUSING
WOODWARD	206L, 206L-1, 206L-3, 206L-4, 407, 427	41015395-101	41015395-101AA	CLEVIS
WOODWARD	205A-1, 212, 412	41000564	41000564AA	HOUSING
WOODWARD	206L, 206L-1, 206L-3, 206L-4, 407	41009473-102	41009473-102AA	OUTPUT ASSY
WOODWARD	407, 427	41009852-102	41009852-102AA	OUTPUT ASSY

Contact Us

P: 602.304.1227

W: www.ableaerospace.com

E: insidesales@ableaerospace.com